

## Removal and Fitting of Combination Unit Lock

(BLF and Systemfile)



### Lock Removal


*(Please take care when removing locks to avoid damage to the unit)*



Firstly you will need to remove any drawers or flippers to gain access to the locking mechanism



The lock is held in place by a spring clip. To remove place a flat head screwdriver at one end and prise off the lock barrel

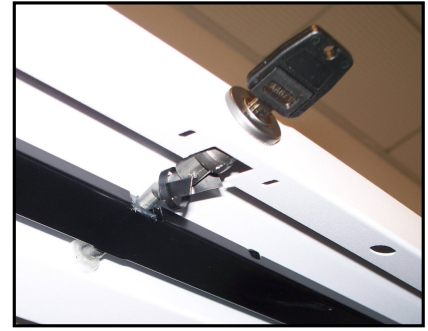

The lock is then free to be removed



Using a pair of pliers clasp the bar of the lock



You can then move the lock out of its position



And remove the lock from the unit.

### Lock Fitting



Place the new lock into position with spring clip in place. Ensure the rod is in place in the hole and through the black bar.



Push the lock firmly into place until the spring clip has secured inside the carcass .