

## Removal and Fitting of Flippers

(BLF and Systemfile)



### Flipper Removal



Open the flipper fully. You will see the flipper rail on either side of the unit. There is a black plastic stopper on the front end held in by two screws.



To remove the flipper, remove the two screws holding in the stopper on both sides.



Carefully remove the flipper stops by sliding out over the flipper. Take note of the way in which they fit for ease of refitting.



Using both hands to support the front and back, slide the flipper out and away from the unit.




If you wish to remove the flipper mechanism completely, remove the two screws on each flipper rail and remove the rail from unit. Take care to support the rail whilst removing screws.

### Flipper Fitting



To refit the flipper slide the flipper back into the unit

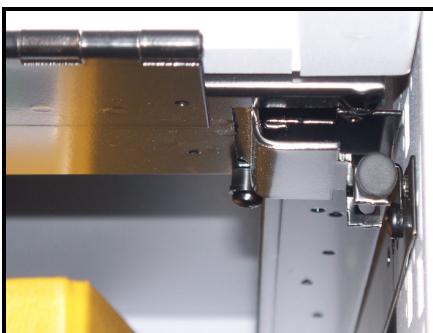

Ensure the slots at the rear of the flipper are correctly located over the rail.



Slide the flipper stop into place over the flipper.



Fix the stopper into place by inserting the two screws.