 




OPERATING INSTRUCTIONS COMBINATION LOCK A138

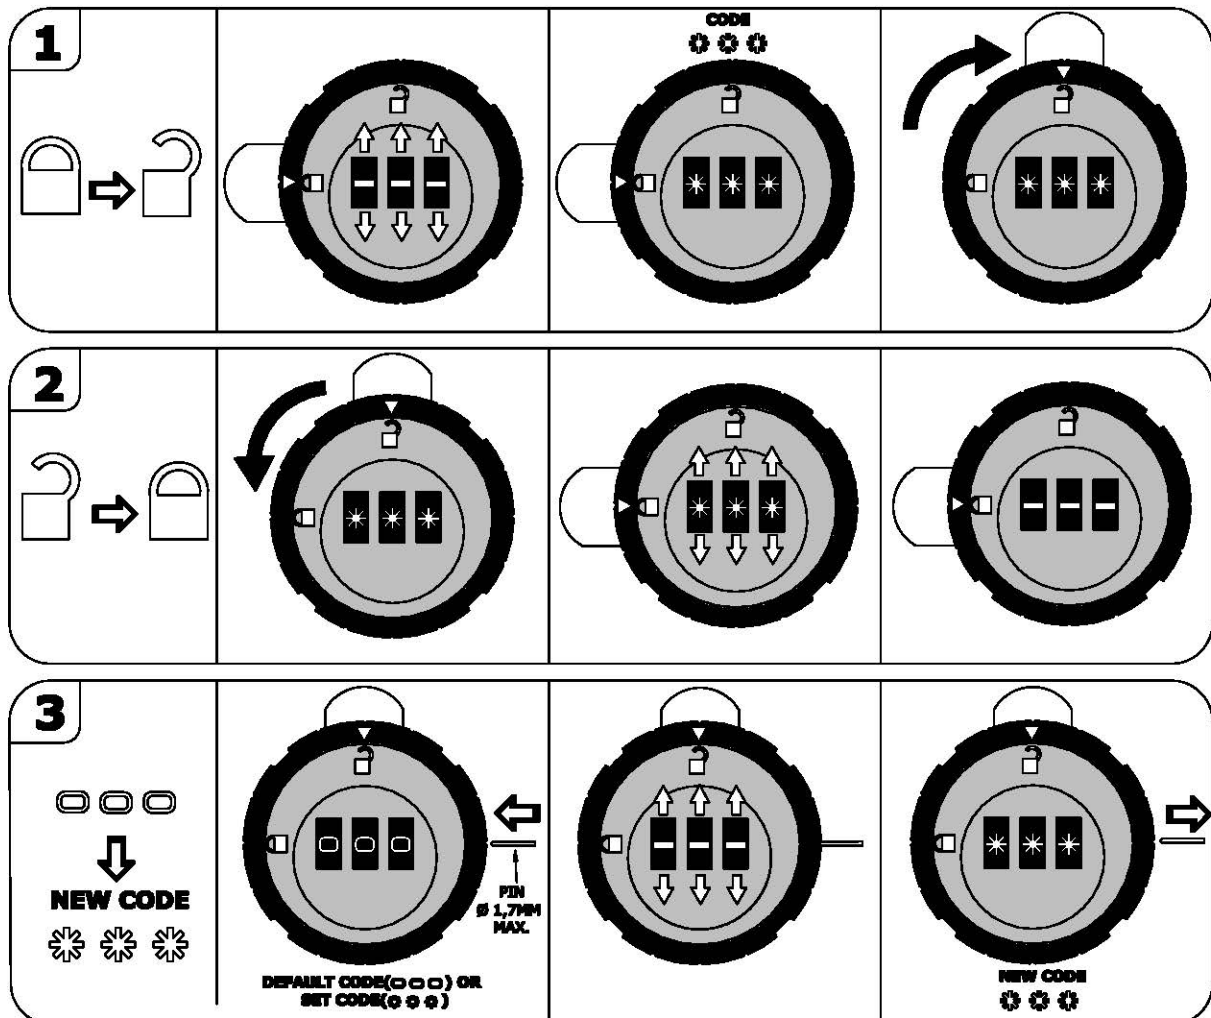

- ON DELIVERY, LOCK IS FACTORY SET TO THE DEFAULT CODE 0 0 0. FOR SAFETY REASONS SET LOCK IMMEDIATELY TO YOUR OWN PERSONAL CODE (SEE POINT 3 BELOW).
- TO SET THE CODE USE A SOLID PIN WITH AN DIAMETER OF MAX. Ø 1,7MM. DO NOT USE A WOOD PIN!
- DO NOT LUBRICATE THE CODE WHEELS.
- MAKE SURE THAT CAM MOVES FREELY WHILE OPERATING THE LOCK.
- LOCK OPERABLE WITHIN A TEMPERATURE RANGE OF 0° TO 50°C (32°F TO 120°F)
- DO NOT EXPOSE LOCK TO ENVIRONMENTAL INFLUENCES (MOISTURE, FIRE, DUST, ETC)
- CLEAN LOCK WITH A DAMP CLOTH. DO NOT USE CHEMICAL PRODUCTS!
- DO NOT INSERT FOREIGN OBJECTS IN THE CODE WHEELS.
- CAM IS FIXED BY SELF-TAPPING SCREW. TORQUE TO TIGHTEN SCREW MAX.2Nm
- MAXIMUM PANEL THICKNESS 12MM



EURO-LOCKS SICHERHEITSEINRICHTUNGEN GMBH
 AM BRUCHWALD 22, D-66280 SULZBACHNEUWEILER
 TEL: +49-(0)6897-9072-0 FAX: +49-(0)6897-9072-99
 WEB: WWW.EURO-LOCKS.EU MAIL: VERTRIEB@EURO-LOCKS.DE

USER OPERATING INSTRUCTIONS

For 4 Wheel Combination Lock

A199, A141 and A142



 
General Information

1. Please read these instructions carefully before first use.
2. Do not expose lock to environmental influences (moisture, fire, dust, etc)!
3. Do not expose lock to vibrations and avoid dropping!
4. Clean lock with a damp cloth. Do not use chemical products!
5. Lock operable within a temperature range from 0°C to 50°C (32°F to 120°F).
6. Not suitable for 3-point cams. Only use 1-point cams!


Safety Instructions

1. On delivery the combination lock is factory set at **3 3 3 3**
For safety reasons set the lock immediately to your own personal code. Do not use any readily identifiable code (e.g. year of birth or 1234 etc.).
2. While setting the code hold the button during the whole procedure. Release only after code wheels have been set to the chosen code.
3. **Never leave the code wheels set on your own personal code.**
4. For code setting and emergency opening via service key the lock must be horizontal in the index position.
5. To open the lock, enter your personal code and scramble code immediately after opening.
6. To close the lock, code wheels must be set to your own personal code to ensure a safe locking.
7. If code has been scrambled in the open position turn dial to engage drive once personal code has been selected.
8. Scramble code immediately after closing.
9. In case of lost code the lock can be opened via service key. Please contact the supervisor to reset the lock to the factory setting.

Personal code setting

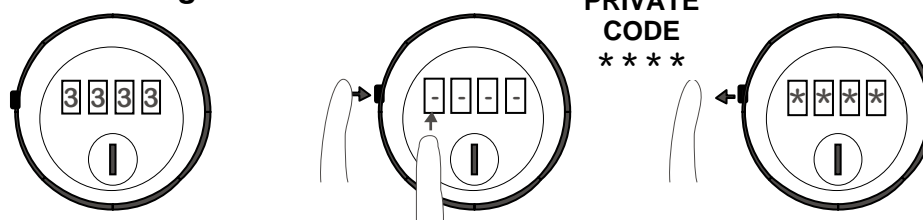

Lock operation

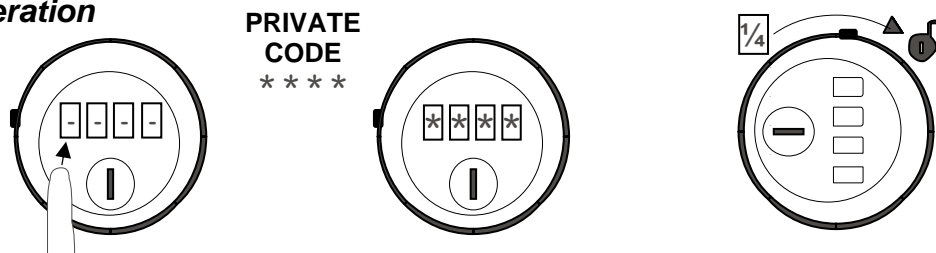 

Further copies of these operating instructions can be downloaded from our website at www.euro-locks.org